



The Human Side of Safety®
Since 1898.

Spectrum™ Continuous Flow Airline Respirator

Instruction Manual



Type C NIOSH Approval No.
TC-19C-322 Continuous-Flow Class and
TC-19C-321 Pressure-Demand Class.

**READ ALL INSTRUCTIONS AND WARNINGS BEFORE
USING THIS RESPIRATOR. SAVE THIS MANUAL FOR
FUTURE USE.**

TABLE OF CONTENTS

APPROVAL LABELS	1, 2
GENERAL INFORMATION	3
COMPONENT CONCEPT	4
MASK/FITTING ASSEMBLIES	5
AIR SUPPLY HOSE OPTIONS	5
WARNINGS	6, 7
OPERATIONS	8, 9
BREATHING AIR PRESSURE TABLE	10
RESPIRATOR ASSEMBLY	
Putting Respirator On.....	11, 12
Taking Respirator Off	12
INSPECTION, CLEANING AND STORAGE	14, 15
FIT TESTING	16
PARTS AND ACCESSORIES FOR	
SPECTRUM RESPIRATORS	17, 18
RETURN AUTHORIZATIONS	19



Spectrum Series

Bullard
 1898 Safety Way
 Cynthiana, Kentucky 41031
 800-827-0423

SPECTRUM-CF-P

Type C Pressure Demand, Supplied Air Respirator

APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:

TC#	Protection ¹	RESPIRATOR COMPONENTS											Cautions & Limitations ²		
		1		2		3		Accessories							
		Alternate Facepiece	Breathing Tube Assemblies	Alternate Hoses	Speckade Kit	Anti-Fog Lens Wipe	Lens Cover	Nose Cup Cover	Speckade Kit	Lens Cover	Nose Cup	Small Cup		Amplifier	
19C-321	SAPD	SP-EC-CF-S	X	X	X	X	X	X	X	X	X	X	X	X	BCEJMNNO
		SP-CF-ML	X	X	X	X	X	X	X	X	X	X	X	X	
		MS-CF-S	X	X	X	X	X	X	X	X	X	X	X	X	
		MS-CF-ML	X	X	X	X	X	X	X	X	X	X	X	X	
			B135			V2050ST									
			B135			V2100ST									

- 1. PROTECTION
 - SA-SUPPLIED AIR
 - PD-PRESSURE DEMAND

2. CAUTIONS & LIMITATIONS

- B. Not for use in atmospheres immediately dangerous to life or health.
- C. Do not exceed maximum use concentrations established by regulatory standards.
- D. Air-line respirators can be used only when the respirators are supplied with respirable air meeting the requirements of CGA G-7.1 Grade D or higher quality.
- E. Use only the pressure ranges and hose lengths specified in the User's Instructions.
- J. Failure to properly use and maintain this product could result in injury or death.
- M. All approved respirators shall be selected, fitted, used and maintained in accordance with MSHA, OSHA and other applicable regulations.
- N. Never substitute, modify, add or omit parts. Use only exact replacement parts in the configuration specified by the manufacturer.
- O. Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.

GENERAL INFORMATION

Bullard's Spectrum-CF airline respirator, when properly used, provides a continuous flow of air from a remote air source to the respirator wearer. Spectrum-CF respirators offer protection from airborne contaminants that are not immediately dangerous to life or health (IDLH), or that do not exceed concentrations allowed by applicable OSHA, EPA, NIOSH or ACGIH regulations and recommendations for continuous-flow or pressure-demand class airline respirators.


Spectrum-CF airline respirators are approved by NIOSH (TC-19C-322 Type C, Continuous-Flow Class and TC-19C-321, Pressure-Demand Class) to provide respiratory protection in general purpose applications, including spray painting, tank cleaning, chemical and pesticide handling, and other industrial or agricultural applications. The Spectrum-CF is NOT to be used in confined spaces or in IDLH conditions.

Spectrum-CF respirators are compatible with breathing air sources such as air compressors or Bullard Free-Air[®] Pumps. Bullard offers the appropriate approved breathing tube assembly and air supply hose to connect the Spectrum-CF respirator to these breathing air sources. This respirator is available in two mask sizes. A probed mask kit is available for quantitative fit testing. Contact Bullard or our local authorized distributor for more information about other accessories for Spectrum-CF respirators.

COMPONENT CONCEPT

The Spectrum-CF airline respirator consists of three components: full-face mask, breathing tube assembly and air supply hose. All must be present and properly assembled to constitute a complete NIOSH approved respirator.

1. Full-Face Mask with Headstrap.
2. Breathing Tube Assembly
3. Air Supply Hose

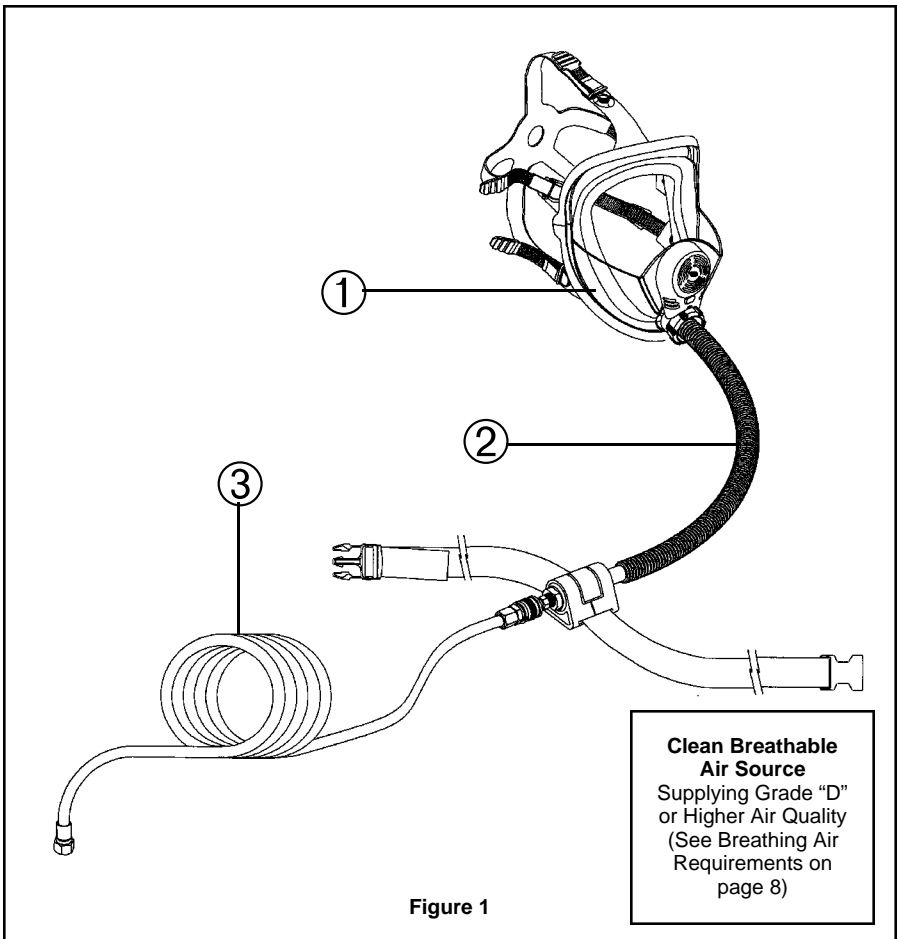

▲ WARNING ▲

Failure to use complete NIOSH-approved Bullard components and replacement parts voids approval of entire assembly. Basic parts are listed on the NIOSH Approval Label on Pages 1 and 2.

MASK/FITTING ASSEMBLIES

FULL-FACE MASK RESPIRATOR WITH BREATHING TUBE ASSEMBLY:

Comfortable silicone full-face mask with breathing tube that connects the mask to air supply hose.

For use with breathing air compressors/continuous flow or pressure demand	For use with ambient air pumps/continuous flow or pressure demand
SPEC40, 1/4" Industrial Interchange SPEC41, 1/4" Schrader SPEC42, 1/4" Snap-Tite SPEC48, 1/4" Bayonet	SPEC35, 1/2" Industrial Interchange

AIR SUPPLY HOSE OPTIONS

Connects breathing tube to air source supplying clean breathable air.

Hose for High Pressure Compressed Air Source	Hose for Low Pressure Ambient Air Source
<p style="text-align: center;">V10 3/8" I.D. Hose</p> <p style="text-align: center;">4696 Starter Hose 545 Series Extension Hose</p> <p>Extension hose available in 25, 50 and 100 foot lengths with a variety of quick-disconnect fittings, styles and materials. See parts list for details.</p>	<p style="text-align: center;">V20 1/2" I.D. Hose</p> <p style="text-align: center;">V20 Starter/ Extension Hose</p> <p>Available in 50 and 100 foot lengths with a variety of quick-disconnect fittings, styles and materials. See parts list for details.</p>

WARNINGS

1. This respirator, when properly fitted and used, significantly reduces, but does not completely eliminate, the breathing of contaminants by the respirator wearer. You may obtain better respiratory protection from other types of respiratory protection equipment such as a valve-operated pressure-demand airline respirator or a pressure-demand self-contained breathing apparatus respirator.
2. Before using this respirator, be sure your employer has determined that airborne contaminant concentrations do not exceed those allowed by applicable OSHA, MSHA, EPA, NIOSH or ACGIH regulations and recommendations, or any other applicable regulations for continuous-flow airline and pressure-demand airline respirators. Federal law requires that your employer measure and monitor airborne contaminant levels in the work area.
3. Improper respirator use may damage your health and/or cause your death. Improper use may also cause certain life-threatening delayed lung diseases such as silicosis, pneumoconiosis or asbestosis.
4. **DO NOT** wear this respirator if any of the following conditions exist:
 - Atmosphere is immediately dangerous to your life or health (IDLH).
 - You **CANNOT** escape without the aid of the respirator.
 - Atmosphere contains less than 19.5% oxygen.
 - Work area is poorly ventilated.
 - Unknown contaminants are present.
 - Contaminant concentrations are in excess of regulations or recommendations (as described in item 2 above).
5. Bullard recommends that you **DO NOT** wear this respirator until you have passed a complete physical exam (perhaps including a lung x-ray), conducted by qualified medical personnel, and have been trained in the respirator's use, maintenance and limitations by a qualified individual (appointed by your employer) who has extensive knowledge of the Bullard Spectrum respirator.
6. **DO NOT** modify or alter this respirator in any manner. Use only NIOSH approved Bullard Spectrum components and replacement parts manufactured by Bullard for use with this respirator. Failure to use NIOSH approved components and replacement parts such as hoses and flow-control devices, voids NIOSH approval of the entire respirator, invalidates all Bullard warranties, and may cause death, lung disease or exposure to other hazardous or life-threatening conditions.
7. Inspect all components of this respirator system daily for signs of wear, tear or damage that might reduce the degree of protection originally provided. Immediately replace worn or damaged components with NIOSH approved Bullard Spectrum components or remove respirator from service. (See **INSPECTION, CLEANING AND STORAGE** section for proper maintenance of the Spectrum respirator.)
8. Be certain your employer has determined that the breathing air source provides at least Grade D breathable air. This respirator must be supplied with clean breathable air at all times.
9. **DO NOT** connect the respirator's air supply hose to nitrogen, oxygen, toxic gases, inert gases or other unbreathable, non-Grade D air sources. To prevent this, airline couplings used for this respirator shall be incompatible with outlet for other gas systems. Check the air source before using the respirator. Failure to connect to the proper air source may result in serious injury or your death.

WARNINGS continued

10. **DO NOT** use this respirator in poorly ventilated areas or confined spaces such as tanks, small rooms, tunnels or vessels, unless the confined space is well ventilated and contaminant concentrations are below the upper limit recommended for this respirator. In addition, follow all procedures for confined space entry, operation and exit as defined in applicable regulations and standards, including 29 CFR 1910.146.
11. If you have any questions concerning the use of this respirator, or if you are not sure whether the atmosphere you are working in is immediately dangerous to life or health (IDLH), ask your employer. All instructions for the use and care of this product must be supplied to you by your employer as recommended by the manufacturer and as required by Federal Law (29 CFR 1910.134).
12. **DO NOT** use this respirator for abrasive blasting or underwater diving.

CAUTIONS AND LIMITATIONS

- B. Not for use in atmospheres immediately dangerous to life or health.
- C. Do not exceed maximum use concentrations established by regulatory standards.
- D. Air-line respirators can be used only when the respirators are supplied with respirable air meeting the requirements of CGAG-7.1 Grade D or higher quality.
- E. Use only the pressure ranges and hose lengths specified in the User's Instructions.
- J. Failure to properly use and maintain this product could result in injury or death.
- M. All approved respirators shall be selected, fitted, used and maintained in accordance with MSHA, OSHA and other applicable regulations.
- N. Never substitute, modify, add or omit parts. Use only exact replacement parts in the configuration specified by the manufacturer.
- O. Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.

For technical assistance, call or write:

Bullard

1898 Safety Way
Cynthiana, KY 41031-9303
Toll-Free: 800-827-0423
Phone: 606-234-6611
Facsimile: 606-234-6858

OPERATIONS

Limitations of Use

RESPIRATORY

This respirator is NIOSH approved (TC-19C-322, continuous-flow class and TC-19C-321, pressure-demand class) for Type C applications. It can be worn for general purposes including: spray painting; tank cleaning; chemical and pesticide handling; and other industrial or agricultural applications.

This respirator is not approved for use in any atmosphere immediately dangerous to life or health (IDLH), or from which the wearer cannot escape without the aid of the respirator. This respirator is not approved for abrasive blasting.

HEAD

Spectrum respirators DO NOT provide head protection. Wear approved head protection if head protection is required.

FACE

This respirator's lens meets ANSI Z87.1-1989 faceshield requirements for impact, penetration and optics. The lens provides **LIMITED FACE PROTECTION**. The Spectrum lens is not shatterproof.

EYES

Spectrum respirators provide **LIMITED EYE PROTECTION** from flying particles and splash per ANSI Z87.1979. Primary eye protection should be worn when necessary.

Breathing Air Requirements

AIR QUALITY

▲ WARNING ▲ : THIS RESPIRATOR MUST BE SUPPLIED WITH CLEAN, BREATHABLE AIR, GRADE D OR BETTER, AT ALL TIMES. THIS RESPIRATOR DOES NOT PURIFY AIR OR FILTER OUT CONTAMINANTS.

Respirable, breathable air must be supplied to the point-of-attachment of the approved Bullard air supply hose. The point-of-attachment is the point at which the air supply hose connects to the air source. A pressure gauge attached to the air source is used to monitor the pressure of air provided to the respirator wearer (See Figure 2).

Supplied breathing air must **ATA MINIMUM** meet the requirements for Type 1 gaseous air described in the Compressed Gas Association Commodity Specification G-7.1 (Grade D or higher quality), as specified by Federal Regulations 42 CFR, Part 84.141 (b) and 29 CFR 1910.134 (i).

The requirements for Grade D breathable air include:

- Oxygen.....19.5-23.5%
- Hydrocarbons (condensed)
in mg/m3 of gas5 mg/m3 max.
- Carbon monoxide.....10 ppm max.
- Carbon dioxide1,000 ppm max.
- Odorlack of noticeable odor*
- No toxic contaminants at levels that make air unsafe to breathe.

*Specific measurement of odor in gaseous air is impractical. Air may normally have a slight odor. The presence of a pronounced odor should render the air unsatisfactory.

Contact the Compressed Gas Association (1725 Jefferson Davis Highway, Arlington, VA 22202) for complete details on commodity Specifications G-7.1

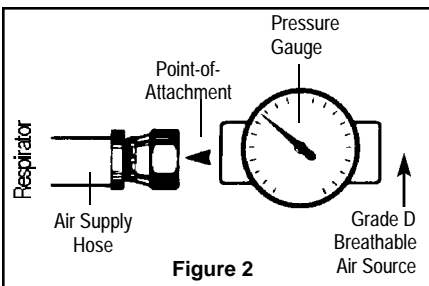


Figure 2

AIR SOURCE

Locate the source of supplied air, whether it is an air compressor or an ambient air pump, such as a Bullard Free-Air® pump, in a clean air environment. Locate the air source far enough from your work site to ensure the air remains contaminant-free. Always use an inlet filter on the air source. Use suitable after-cooler/dryers with filters, and carbon monoxide monitors and alarms, like Bullard's Alert-1™ CO monitor, as necessary to assure clean, breathable air at all times. The air should be regularly sampled to be sure that it meets Grade D requirements.

Breathing Air Pressure

Air pressure must be continually monitored at the point-of-attachment while operating this respirator. A reliable air pressure gauge must be present to permit you to continually monitor pressure during actual respirator operation.

▲ DANGER ▲ : FAILURE TO SUPPLY THE MINIMUM REQUIRED PRESSURE AT THE POINT-OF-ATTACHMENT FOR YOUR HOSE LENGTH AND TYPE WILL REDUCE AIRFLOW AND MAY CAUSE INJURY, DISEASE OR DEATH.

The Breathing Air Pressure Tables (See page 10) define the air pressure ranges necessary to provide Spectrum-CF respirators with a volume of air that falls within the required range of 4-15 cfm (Ref. 42 CFR, Part 84, Subpart J.84.150) when operated in continuous-flow mode. Meets pressure-demand class requirements when operated within the pressure ranges listed in Table 2 (Ref. 42 CFR 84.157). Make sure you understand the information in the Breathing Air Pressure Table (see page 10) before using this respirator.

1. Determine the type of air source you are using (column 1), then find the breathing tube assembly (column 2).

2. Be sure your Bullard air supply hose(s) (column 3) is approved for use with your breathing tube assembly.
3. Determine that your Bullard air supply hose is within the approved length (column 4).
4. Make sure you have not exceeded the maximum number of hose sections (column 5).
5. Set the air pressure at the point-of-attachment within the required pressure range (column 6) for your breathing tube assembly and air supply hose type and length. Accurate pressure readings can only be attained when air is flowing into the respirator.

Breathing Air Supply Hoses and Hose Fittings

NIOSH-approved Bullard air supply hose(s) MUST be used between the breathing tube connection fitting on the wearer's belt and the point-of-attachment to the air supply (see Figure 1). NIOSH-approved Bullard quick-disconnect fittings MUST be used to connect V20 hose lengths together. When connecting lengths of V10 hose, only use Bullard V11 hose-to-hose adaptors. Secure connection(s) until wrench-tight and leak-free.

Total connected hose length and number of hoses MUST be within the ranges specified on the Breathing Air Pressure Table (see page 10) and the respirator's NIOSH approval labels (see pages 1 and 2). The breathing tube connection fitting MUST be secured to the belt that is supplied with this respirator. Securing the air entry connection fitting helps prevent the air supply hose from snagging, disconnecting or pulling the respirator off your face.

Breathing Air Pressure Table

Continuous-Flow Class

This table defines the air pressure ranges necessary to provide Spectrum-CF Series respirators with a volume of air that falls within the required range of 4-15 cfm according to U.S. Government regulations (Ref. 42 CFR 84.150).					
1	2	3	4	5	6
Air Source	Breathing Tube Assembly	Air Supply Hose	Air Supply Hose Length (feet)	Maximum Number of Hose Sections	Required Pressure Range (psig air)
Stationary or Portable Air Compressor	BT100, BT101, BT102, BT108	V10	25 - 50	2	29 - 57
			100 - 150	3	33 - 62
			200 - 300	5	37 - 65
Bullard Free-Air® Pumps	BT135	V20	50 - 100	2	6 - 18
			150 - 200	3	8 - 22
			250 - 300	3	10 - 27

Pressure-Demand Class

This table defines the air pressure ranges necessary to provide Spectrum-CF Series respirators with a volume of air that meets the pressure-demand requirements according to U.S. Government regulations (Ref. 42 CFR 84.157).					
1	2	3	4	5	6
Air Source	Breathing Tube Assembly	Air Supply Hose	Air Supply Hose Length (feet)	Maximum Number of Hose Sections	Required Pressure Range (psig air)
Bullard Free-Air® Pumps	BT135	V20	50 - 100	2	9 - 10
			150 - 200	3	11 - 12
			250 - 300	3	13 - 14

SPECTRUM RESPIRATOR ASSEMBLY

Putting Respirator On

1. Remove the Spectrum-CF respirator from the plastic shipping bag. Except for the belt, the respirator is shipped completely assembled. Lace the belt through the metal slide or adjustable-flow control fitting that is attached at the end of the breathing tube. Do not wear this respirator without the belt.
 2. Connect the NIOSH-approved Bullard air supply hose to the air source supplying Grade D breathing air. Clear the air supply hose by moving air through it for a few minutes before connecting it to the quick-disconnect fitting at the end of the air entry hose.
 3. Fasten the belt at your waist or hip level and adjust for comfort.
- B) Inhale until the mask collapses inward slightly (indicating there is negative pressure). Hold your breath for five seconds.
 - C) The mask is deemed to be in proper position if it remained collapsed while the breath was held, and no inward leakage of outside air was detected.
 - D) If the mask doesn't collapse or if an inward leak is detected, re-adjust mask on face and repeat above steps until the test is passed.

⚠ WARNING ⚠ : IF YOU CANNOT OBTAIN A PROPER FIT, TRY ANOTHER MASK SIZE AND GO THROUGH THE SAME STEPS OUTLINED ABOVE. IF A PROPER FIT IS STILL NOT ACHIEVED, DO NOT USE THIS RESPIRATOR.

Mask

4. Release the headstraps to the full outward position by pulling the headstrap quick release tabs forward. When fully extended, tabs should be located at the headstrap latches.
5. Grasp the headstrap harness with thumbs through the straps. Spread outward.
6. Push the top of the facepiece flange up the forehead, brushing hair upward from the face seal area (See Figure 3). Continue up and over the head until the harness is centered at the rear of the head, and the chin rests in the chin cup.
7. Pull both lower straps at the same time towards the rear (See Figure 4). Tighten the two temple straps. Tighten the top head strap if necessary.
8. Adjust headstraps until the facepiece fits securely and evenly.
9. Perform a negative pressure fit check:
 - A) With facepiece on and secured, place your finger over the quick-disconnect nipple located at the end of the breathing tube (See Figure 5).



Figure 3



Figure 4

10. With the air flowing, connect the quick-disconnect fitting on the respirator's air entry hose to the quick-disconnect coupler on the air supply hose (See Figure 6). Once fitting is secured, release coupling sleeve to lock fitting together. Pull on both hoses to make sure they are attached securely.
11. Adjust the air pressure at the "point-of-attachment" to within the approved pressure range. See the Breathing Air Pressure Table on page 10 for the approved pressure range.
12. With the air flowing into your respirator, you are now ready to enter the work area.

▲WARNING ▲ : THE MASK COVER MUST BE USED WHEN OPERATING THIS RESPIRATOR. THIS PART PROTECTS THE EXHALATION VALVE FROM OUTSIDE INTERFERENCE.



Figure 5

Taking Respirator Off

1. When finished working, leave the work area wearing the respirator and with the air still flowing.
2. Once completely outside the contaminated area, remove the respirator by lifting the tabs on the latches. Disconnect the air supply hose using the quick-disconnect coupling.

NOTE: If using V20 Series (1/2" I.D.) air supply hose, the quick-disconnect coupler does not have a shut off valve. Therefore, the air will continue to flow freely after it has been disconnected from the respirator.



Figure 6

▲ WARNING ▲

LEAVE WORK AREA IMMEDIATELY IF:

- Any respirator component becomes damaged.
- Airflow into respirator stops or slows down.
- Air pressure gauge drops below the minimum specified in Breathing Air Pressure Table (page 10).
- Breathing becomes difficult.
- You become dizzy, nauseous, too hot, too cold or ill.
- You taste, smell or see contaminants inside respirator facepiece.
- Your vision becomes impaired.

▲ WARNING ▲

DO NOT STORE RESPIRATOR IN YOUR WORK AREA OR LEAVE IT UNATTENDED IN A CONTAMINATED ENVIRONMENT. RESPIRABLE CONTAMINANTS CAN REMAIN SUSPENDED IN AIR FOR MORE THAN ONE HOUR AFTER WORK ACTIVITY CEASES, EVEN THOUGH YOU MAY NOT SEE THEM. PROPER WORK PRACTICE REQUIRES YOU TO WEAR THE RESPIRATOR UNTIL YOU ARE OUTSIDE THE CONTAMINATED AREA. IF YOU SET THE RESPIRATOR DOWN IN A CONTAMINATED ENVIRONMENT, CONTAMINANTS, DIRT AND DUST COULD GET INTO THE RESPIRATOR. WHEN YOU PUT THE RESPIRATOR BACK ON, YOU COULD BREATHE IN CONTAMINANTS UPON REUSE.

INSPECTION, CLEANING AND STORAGE

This respirator and all of its component parts and assemblies should be inspected for damage or excessive wear before and after each use to ensure proper functioning. Immediately remove the respirator from service and replace parts or assemblies that show any sign of failure or excessive wear that might reduce the degree of protection.

Use only complete NIOSH-approved Bullard Spectrum-CF components and replacement parts on this respirator. Refer to the parts list for correct part numbers.

The respirator should be cleaned, inspected and sanitized at least weekly or more often if subjected to heavy use. Respirators used by more than one person must be cleaned, inspected and sanitized after each use. If not cleaned, contamination may cause illness or disease.

REMEMBER, THE AIR YOU BREATHE WILL NOT BE CLEAN UNLESS THE RESPIRATOR YOU WEAR IS CLEAN.

Mask

Immerse the facepiece in warm water (about 120 degrees F) with mild detergent or a germicidal disinfecting detergent. The respirator body and parts may be scrubbed gently with a cloth or soft brush. All foreign matter must be removed carefully from all surfaces of the exhalation valve flap and seat.

Wipe any areas still showing accumulations of foreign matter with a cloth moistened in a detergent or a solvent such as mineral spirits or naphtha, until clean.

Stubborn accumulations of paints, lacquers or enamels may be removed with a cloth containing a paint, enamel or lacquer stripping agent. Once the dirt or paint is loosened, it may be gently rubbed or brushed off.

DO NOT USE VOLATILE SOLVENTS FOR CLEANING THIS RESPIRATOR OR ANY PARTS OR ASSEMBLIES. STRONG CLEANING AND DISINFECTING AGENTS, AND MANYSOLVENTS, CAN DAMAGE THE SILICONE RUBBER AND PLASTIC PARTS. DO NOT LEAVE SOLVENTS AND STRONG CLEANING AND SANITIZING AGENTS IN CONTACT WITH SILICONE RUBBER OR PLASTIC SURFACES ANY LONGER THAN NECESSARY TO LOOSEN THE ACCUMULATIONS OF DIRT OR CONTAMINANTS.

Rinse the respirator in clean, warm water (about 120 degrees F). Shake to remove excess water, and allow to air-dry away from direct heat, sunlight or contaminants.

Breathing Tube

INSPECTION: Inspect the breathing tube for tears, cracks, holes or excessive wear that might reduce the degree of protection originally provided. Be sure the quick-disconnect fitting is screwed tightly into the breathing tube so no air can escape.

If any signs of excessive wear are present, replace the breathing tube assembly immediately or remove the respirator from service.

CLEANING: Hand-sponge breathing tube with warm water and mild detergent, rinse and air-dry. Do not get water inside the breathing tube. After cleaning, once again carefully inspect breathing tube for signs of damage.

Air Supply Hose

INSPECTION: The hose(s) should be inspected closely for abrasions, corrosion, cuts, cracks and blistering. Make sure the hose fittings are crimped tightly to the hose so that air cannot escape. Make sure the hose has not been kinked or crushed by any equipment that may have rolled over it.

If any of the above signs are present or any other signs of excessive wear are detected, replace the air supply hose(s) immediately or remove the respirator from service.

CLEANING: The air supply hose(s) should be hand-sponged with warm water and mild detergent, rinsed and air-dried. Do not get water inside the air supply hose. After cleaning, once again carefully inspect air supply hose(s) for signs of damage.

▲ WARNING ▲ : ONLY USE HOSES THAT ARE APPROVED BY NIOSH FOR USE WITH THIS RESPIRATOR. OTHER HOSES COULD REDUCE AIRFLOW AND PROTECTION, AND EXPOSE THE WEARER TO LIFE-THREATENING CONDITIONS.

Storage

After reusable respirator components have been cleaned and inspected, place them in a clean plastic bag or an airtight container. Store the respirator and parts where they will be protected from contamination, distortion and damage from elements such as dust, direct sunlight, heat, extreme cold, excessive moisture and harmful chemicals. Store the respirator so it is protected from distortion from the weight or pressure of surrounding objects.

FIT TESTING

According to OSHA's revised Respiratory Standard, 29 CFR 1910.134, all tight-fitting facepieces must now be fit tested, regardless of the mode of operation. This includes all respirator models in the Spectrum Series. Users must pass either a qualitative or quantitative fit test, and fit testing must be performed in the negative pressure mode. Bullard's QNFT45 fit test kit converts the Spectrum facepiece to the negative pressure mode, and can be used for either type of fit testing. The instruction sheet that accompanies the kit provides guidance on its proper use.

The options for qualitative challenge agents include: isoamyl acetate (banana oil), irritant smoke, saccharin and Bitrex (denatonium benzoate). Quantitative options include generated aerosol (like the fit test chamber in Bullard's lab), ambient aerosol CNC (Portacount method), or controlled negative pressure (Dynatech Nevada Fit Tester 3000 method). The minimum fit factor for a full-face respirator is 500.

The qualitative fit test protocols that had existed in the substance-specific standards (except Bitrex, which is new) have been updated in the revised standard with minor changes and will now be used for all substances. Fit testing shall be performed prior to initial use, whenever a different respirator is used, and at least annually thereafter. An additional fit test must also be performed whenever there are changes in the employee's physical condition that could affect respirator fit, such as dental changes or an obvious change in body weight.

PARTS AND ACCESSORIES FOR SPECTRUM RESPIRATORS

Cat. No. Description

1. RESPIRATOR ASSEMBLIES

Includes headstrap, breathing tube assembly with flow control device and nylon belt.

For use with breathing air compressors or breathing air cylinders

SPEC40L Medium/Large Spectrum Full-Face Mask with adjustable flow valve.

SPEC40S Small Spectrum Full-Face Mask with adjustable flow valve.

For use with Bullard Free-Air pumps

SPEC35L Medium/Large Spectrum Full-Face Mask with constant flow valve.

SPEC35S Small Spectrum Full-Face Mask with constant flow valve.

2. BREATHING TUBE ASSEMBLIES

For use with breathing air compressors or breathing air cylinders

BT100 Breathing tube assembly with 1/4" Industrial Interchange fitting, flow control device and nylon belt.

BT101 Breathing tube assembly with 1/4" Schrader fitting, flow control device and nylon belt.

BT102 Breathing tube assembly with 1/4" SnapTite fitting, flow control device and nylon belt.

For use with Bullard Free-Air pumps

BT135 Breathing tube with 1/2" Industrial Interchange fitting and nylon belt.

3. BREATHING AIR SUPPLY HOSES

For use with breathing air compressors or breathing air cylinders

V10 SERIES STARTER HOSE KIT.

Includes V1025ST hose with 1/4" Industrial Interchange quick-disconnect coupler and V13 adaptor fitting (3/8" hose to 3/8" pipe).

4696 25 ft. Industrial Interchange starter hose kit.

V10 SERIES EXTENSION HOSE KITS.

Includes V11 hose-to-hose adaptor fitting and V13 hose-to-pipe fitting (3/8" hose to 3/8" pipe).

5454 25 ft. V1025EXTextension hose kit

5457 50 ft. V1050EXTextension hose kit

5458 100 ft. V10100EXTextension hose kit

Cat. No. Description

For use with Bullard Free-Air pumps

V20 SERIES STARTER/EXTENSION HOSE KITS

Includes 1/2" Industrial Interchange Male/Female quick-disconnect fitting.

V2050ST 50 ft. 1/2" I.D. hose

V20100ST 100 ft. 1/2" I.D. hose

4. ACCESSORIES AND KITS

FACEPIECE COMPONENT REPLACEMENT PARTS

QNFT45 Quantitative Fit Test Kit – Includes fir test adapter, facepiece, sampling adapter, 1/8" barbed mask probe and HEPA filter cartridge

LCK Lens Clamp Replacement Kit – Includes upper and lower clamps with screws and nuts

RLS Lens replacement

FK-L Medium/large facepiece flange

FK-S Small facepiece flange

HSK Includes headstrap with 5 buckles and 5 slides

MCK Includes mask cover

SEK Includes speaker diaphragm, outer locking ring, o-ring for speaker diaphragm, o-ring for speaker/exhalation body and speaker/exhalation body

EVO Includes exhalation valve seat, o-ring for exhalation valve seat

LNK Includes nosecup and 2 inhalation valve flaps

FACEPIECE COMPONENT REPLACEMENT PACKAGES

6040 O-ring, Speaker Diaphragm (5/pkg.)

6041 O-ring, Speaker Exhalation (5/pkg.)

6042 O-ring, Exhalation Valve (5/pkg.)

6043 Inhalation Valve Flap (4/pkg.)

6059 Exhalation Valve, CF (5/pkg.)

6060 Breathing Tube Adaptor (5/pkg.)

ACCESSORIES

AFW45 Anti-Fog Lens Wipes (10/pkg.)


SPEC-PL Spectacle Frame Assembly

SPEC-LC Mylar Lens Covers (25/pkg.)

FTR45 Fit Test Refill - Includes 15 feet of Tygon tubing, 25 suction cups and 25 clips

HFC45 HEPA cartridges for quantitative fit testing (6/carton)

SPECTRUM AIRLINE RESPIRATOR

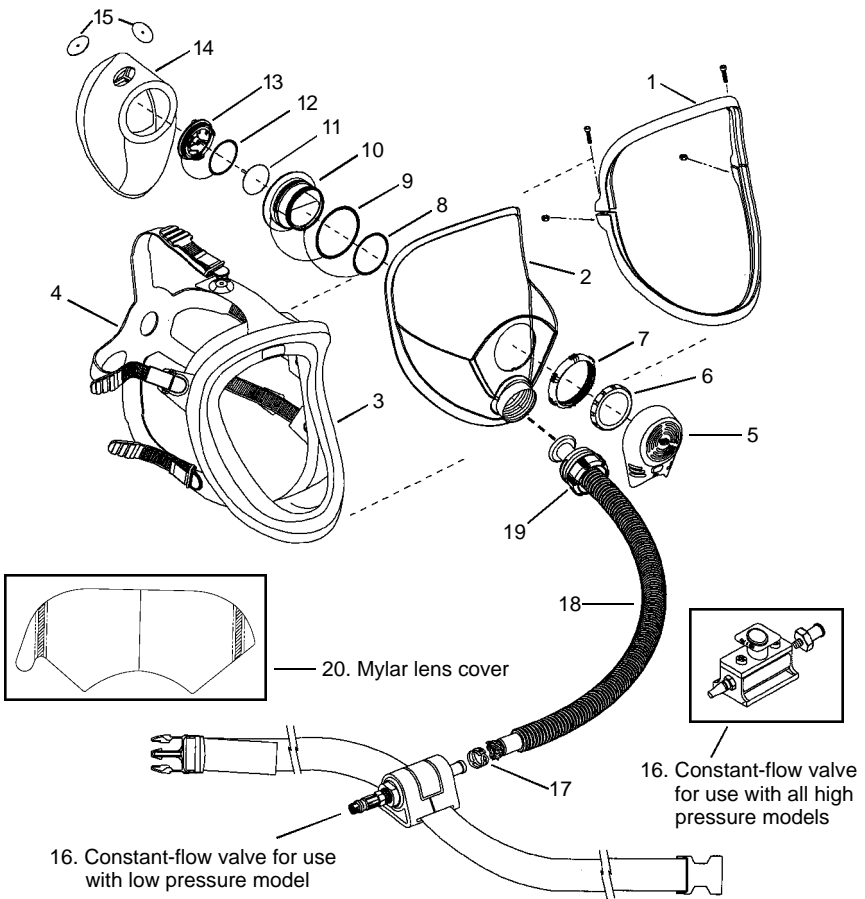

Cat. No.	Description	Cat. No.	Description
1. LCK	Lens Clamp Replacement	13. EVO	Exhalation Valve Seat
2. RLS	Replacement Lens	14. LNK	Nosecup
3. FK-L& FK-S	Facepiece Flange	15. LNK	Inhalation Valve Flaps*
4. HSK	Headstrap with Buckles and Slides	16. BT100 Series	Flow Control Valve and Belt
5. MCK	Mask Cover	17. BT100 Series	Hose Clamp
6. SEK	Speaker Diaphragm	18. BT100 Series	Breathing Tube
7. SEK	Outer Locking Ring	19. BT100 Series	Breathing Tube Adaptor*
8. SEK	O-ring Speaker Diaphragm*	20. SPEC-LC	Mylar Lens Covers (25/pkg.)
9. SEK	O-ring Speaker/Exhalation*		
10. SEK	Speaker/Exhalation Body		
11. 6059	Exhalation Valve*		
12. EVO	O-ring for Exhalation Valve Seat*		

*Packaged as replacement parts in quantities of 4 or 5 (See page 16).

RETURN AUTHORIZATION

IMPORTANT: THE FOLLOWING STEPS MUST BE COMPLETED BEFORE BULLARD WILL ACCEPT ANY RETURNED GOODS. PLEASE READ CAREFULLY.

Follow the steps outlined below to return goods to Bullard for repair or replacement under warranty or for paid repairs:

1. Contact a Bullard Customer Service Coordinator by telephone or in writing at:

Bullard

1898 Safety Way
Cynthiana, KY 41031-9303
Toll-Free: 800-827-0423
Phone: 606-234-6611
Fax: 606-234-1303

In your correspondence or conversation with a Customer Service Coordinator, describe the problem as completely as possible. For your convenience, your Coordinator will try to help you correct the problem over the telephone.

2. Verify with your Coordinator that the product should be returned to Bullard. Customer Service will provide you with written permission and a return authorization number as well as labels you will need to return the product.
3. Before returning the product, decontaminate and clean it to remove any hazardous materials which may have settled on the product during use. Laws and/or shipping regulations prohibit the shipment of hazardous or contaminated materials. Products suspected to be contaminated will be professionally discarded at the customer's expense.
4. Ship returned products, including those under warranty, with all transportation charges pre-paid. Bullard cannot accept returned goods on a freight-collect basis.
5. Returned products will be inspected upon return to the Bullard facility. Your Customer Service Coordinator will telephone you with a quote for required repair work which is not covered by warranty. If the cost of repairs exceeds stated quote by more than 20%, your Coordinator will call you for authorization to complete repairs. After repairs are completed and the goods have been returned to you, Bullard will invoice you for actual work performed.



The Human Side of Safety.®
Since 1898.

1898 Safety Way
Cynthiana, KY 41031-9303
Toll-Free: 800-827-0423
Phone: 606-234-6611
Facsimile: 606-234-6858

Bullard GmbH

Lessingstraße 5
89231 Neu-Ulm
Deutschland
Telefon: (0731) 7053-0
Telefax: (0731) 705329

Free-Air and The Human Side of Safety are registered trademarks of Bullard.

Copyright 1998 by Bullard. All rights reserved, including the right of reproduction in whole or in part, in any form.

Visit Our New Web Site: <http://www.bullard.com>